



STEEPING GUIDE



1 TEA

Place the desired amount of loose leaf tea into the pot (add approximately 1-2 teaspoons of loose leaf tea per 12 oz of water).



2 ADD WATER

Fill with hot water. The single dot means you have reached one large serving (12 oz). The double dots mean you have reached two large servings (24 oz).



3 WAIT

Allow the tea to steep to your liking.



4 ENJOY

Allow the tea to steep to your liking.



SAFETY AND USE GUIDE

Please read this guide completely before using. Improper handling may result in product damage or an accident. Please keep this guide for future reference.

GLASSWARE COMPATIBLE WITH THE FOLLOWING:



Top Rack Dishwasher

PLEASE **DO NOT USE** WITH THE FOLLOWING:



Microwave



Oven



Stove Top

IMPORTANT SAFETY NOTES

Do not use any glassware if you see signs of cracking, chipping, or any other abnormality. submerge the thermometer in water.

Keep glassware holding hot beverages away from children and pets.

USE INSTRUCTIONS

PREPARATION BEFORE USE:

Apply liquid dish soap to a soft sponge and wash thoroughly.

CLEANING AND MAINTENANCE:

Glassware is top rack dishwasher safe. Hand washing filter lid is recommended.

For hand washing, use only liquid dish soap. Do not use chlorine, bleach, or other chemicals to clean glassware. Let air or towel dry thoroughly.

Using a coarse sponge, brush, or other rough surface will scratch the surface of the glassware. Use only a soft sponge.

USE GUIDE

Please pay attention when setting on hard surfaces. Glassware may chip or crack if not set down with care.

Glassware is not microwave safe.

Using a metal spoon may cause glass to break.

Placing ice in before liquid may cause glass to break.

Do not use if there are any cracks or scratches, as glass may break unexpectedly.

Do not let children use glass products.